

LogTag®UTRED30-WiFi Quick Start Guide

Version G - October 2022

Find Quality Products Online at:

www.GlobalTestSupply.com


Quick Start Guide Contents

What's Included	3
Battery Installation	4
Running the Connection Wizard	5
Connecting to your WiFi Network	8
LogTag Online Remote Configuration	10
Downloading LogTag Analyzer	14
Configuration in LogTag Analyzer	15
Installing the Wall Mount	16
Starting your UTRED30-WiFi	17

Find Quality Products Online at:

What's Included

Please check you have each of the items shown below before continuing with setting up your UTRED30-WiFi.

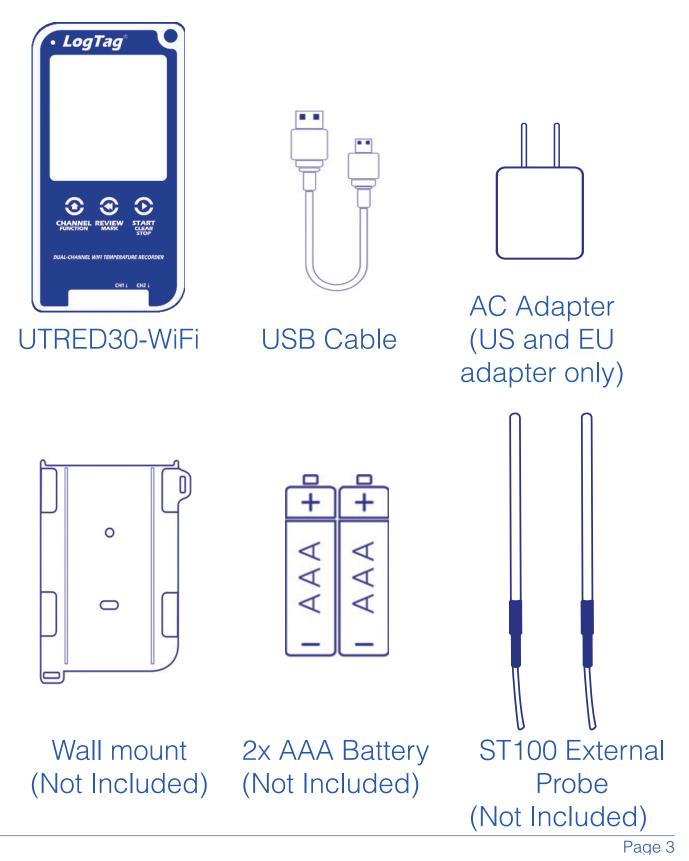

Find Quality Products Online at:


www.GlobalTestSupply.com

Battery Installation

A permanent power supply should be connected to the USB socket at the bottom of the device.

Two AAA batteries are required as the back up source to ensure your device continues to log in the event of a power outage or accidental removal of power.

1. Remove the back cover of the UTRED30-WiFi case using the Phillips (cross-shaped) screwdriver.

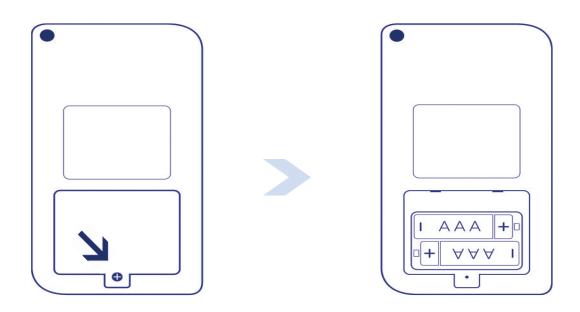

- 2. Install the two AAA batteries taking note of the direction to install each battery.
- 3. Replace the battery cover to secure the batteries in place.

Running the Connection Wizard

Alternatively, to connect your logger using Bluetooth[®] connection capablities on the LogTag Mobile application refer too the Bluetooth[®] Connection Guide.

Note: Please ensure there is internet connection on your computer prior to starting this process.

Download the latest Connection Wizard from the LogTag website.

1. Select Start and follow the instructions.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LogTag

Page 5

Find Quality Products Online at:

www.GlobalTestSupply.com

Running the Connection Wizard (continued)

2. Sign in with your LogTag Online account and select SIGN IN.

Sign in to y	your LogTag®Online Account below and the Wizard will assist in
registering	your WiFi device(s). If you do not have an account, click "Create an Return to this Wizard when your account setup is complete.
Account	Retain to this wizard when your account setup is complete.
	EMAIL
	PASSWORD
	Forgot your Password?
	Create a LogTag®Online Account

Select the Create a LogTag Online Account if you do not have an account.

Note: If you selected Skip, you will need to manually register the device on LogTag Online or repeat the LogTag Online Connection Wizard.

Running the Connection Wizard (continued)

3. The Connection Wizard will scan for connected LogTag devices. Your device will be automatically registered to your LogTag Online account as soon as your device has been identified.

ie wizard is scann	ing for USB connected Log	JTag® WiFi devices.	
anning Serial:	Configured WiFi:	Status:	
A0A10000355O	LogTag24	Registering	

Select Scan Again if your device was not found.



Double-check your devices are plugged-in to your computer using the USB cable provided before scanning again.

Page 7

Find Quality Products Online at:

Connecting to your WiFi Network

4. Connect your device to the network by selecting your Wi-Fi network name (or SSID) and providing the network password, then select Next.

provide the access details for th	work from the dropdown below or type it in, he chosen network. Then click 'Next'.
Network Name	
LogTag	`
Network Password	

Passwords are case-sensitive. Select the eye icon to view the password you entered.

Note: Incorrectly entered password is a common reason why your device failed to connect to your network. Some Wi-Fi Networks won't appear in this list for security purposes. If your network is one of those, you can manually type the name of your network (SSID) in the Network Name field.

Page 8

Find Quality Products Online at:

www.GlobalTestSupply.com

5. Your device will connect to your local network using the provided Wi-Fi credentials (network name or SSID and password). It will also check its' connection to LogTag Online. This typically takes 10 seconds. Select Close once the connection was successful.

	Fi devices that have been successfully	5.05 atoms 12 17
is currently verifying	the devices' connectivity.	rstragtuur − Annyarst, Junio Organizonegate
	<u>LogTag®Online Sign In pa</u>	ge

Select Again to repeat the steps to connect to your network.

6. Select the LogTag Online Sign In page link to login to LogTag Online.

Remote Configuration through LogTag Online

LogTag Online is a secure online application that stores the data recorded from your logger against your account. Once your device is connected to your network, it can be configured remotely through LogTag Online. Profile and timezone can be configured for the logger.

Ensure your device is plugged-in to your computer using the USB cable provided. If the profile is shown as pending configuration, you can speed up the connection between your logger and LogTag Online by pressing and holding both the CHANNEL FUNCTION and REVIEW/MARK buttons on the logger simultaneously for approximately 6 seconds.

dit Device	×
DEVICE NAME	
UTRED30-WIFI DEVICE CONFIGURATION PROFILE	
Profile Name: Generic Ambient Status: Pending	
DELETE DEVICE SAVE	i.
DELETE DEVICE	


Find Quality Products Online at:

www.GlobalTestSupply.com

Remote Configuration through LogTag Online (continued)

Signing in to your LogTag Online Account

1. Login to LogTag Online.

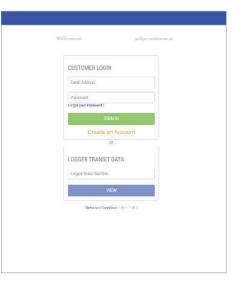

The location for the first channel will be displayed in the pinned locations of the Dashboard.

LogTag*Online	LogTag Office 👻					ය Not	ifications - Hello Keira -
Dashboard					© 25 / 25 Lo	ications 1518 / 25000 File	Limit 2114 Team Members
Pinned Locations(View all)			Create Location	Recently Uploa	ded Files (View all)		
Last Reading at		UTRED30-WIFI - /	≯⊐ 48A2900009BT-CH1		Your most recent i	LogTag Drive files will appear here.	
			Temperature				
			INSPECT				
			1/2	Recently Regis	tered Devices (View all)		Register Device
Last Reading at		UTRED30-WIFI - /	48A2900009BT-CH2	Model	Device Name	Serial Number	
			Temperature	UTRED30-WIFI	UTRED30-WIFI		987-CH1 14:52 Feb-15-2022
			Temperature	UTRED30-WIFI	UTRED30-WIFI	\$/N:A8A290000	987-CH2 14:52 Feb-15-2022
			INSPECT				
	PA	0	(\circ)	സ			
	Cashboard	Shipments	Locations	දිටු Devic		DgTag Drive	

Find Quality Products Online at:

www.GlobalTestSupply.com

Remote Configuration through LogTag Online (continued)

Manually register your device if you cannot see the location. The second location will need to be created manually. Each channel can be assigned to its location. Please refer to the Activation Codes section in the LogTag Online User Guide for more information.

The probe inserted into the loggers CH2 port will automatically register as CH1 in the location description when only one probe is inserted into the logger.

Note: When registering your UTRED30-WiFi Dual Channel Logger to your LogTag Online account, a location is autocreated for the first channel when your team has a location slot available from your current activation code;

- As soon as your device has been identified through the Connection Wizard,
- Manual registration by selecting Register Device in the registered devices table on the Dashboard or in the Devices screen.

2. Navigate to Location screen and select to edit the location created for the first channel of your registered device.

Page 12

Remote Configuration through LogTag Online (continued)

Day Summary Records Chart Reports Settings		Vaccines (Pharma Depot St AKL, A0A2900009VH-CH1)
ocation Details	Team Details	
LOCATION NAME	DRIMARY COORDINATOR	
	PRIMARY COORDINATOR*	
Vaccines (Pharma Depot St AKL, A0A2900009VH-CH1)	Jessi Shim	v
DESCRIPTION	SECONDARY COORDINATO	DR
Vaccines Pharmaceutical Goods Depot	Please select	~
LOGGER ATTACHED TO LOCATION	EMERGENCY COORDINATO	DR
UTRED30-WIFI - #A0A2900009VH-CH1	✓ Please select	~
LOGGER CONFIGURATION PROFILE		
Some profile settings will affect both channels.		
Generic Ambient	~	
LOGGER TIMEZONE		
Note: for multi-sensor devices this setting will apply to all Locations connected to the device.		
(UTC+12:00) Auckland, Wellington	~	
LOCATION TYPE		
Refrigerator		
O Freezer		EDIT NOTIFICATIONS
		DELETE SAVE

- 3. In the settings tab of the Location Details screen, select the profile to apply to your logger from the Logger Configuration Profile drop-down that best suits your needs.
- 4. Select the time zone for the location from the Logger Timezone drop-down.
- 5. Select Save to apply the configuration.
- 6. Navigate to the Devices tab and select on your devices name. The configuration profile will be shown along with its current status.

Downloading LogTag Analyzer

The minimum recommended version is LogTag Analyzer 3.2.0

1. Download LogTag Analyzer from the LogTag website.

2. Double-click the downloaded file to open the LogTag Analyzer Setup Wizard and follow the on-screen prompts to install.

- 3. Select Finish to exit the setup wizard.
- 4. Open the LogTag Analyzer application.

Note: If you already have LogTag Analyzer installed, please see whether you need to update to the latest version by clicking 'Check Internet for updates' from the 'Help' menu.

Warning: Please ensure no other LogTag software is currently running on your computer before running the Analyzer software.

Configuration through LogTag Analyzer

Connect your UTRED30-WiFi to your computer via the USB cable provided. The USB socket on the device is located on the bottom, protected by a rubber seal.



- 1. Select Configure from the LogTag menu or select the Wizard icon.
- 2. Adjust your logger configuration settings as required.

For more information on configuration settings, please refer to Configuring the UTRED30-WiFi in the Product User Guide or press F1 for help.

- 3. Select Configure to upload the configuration settings to the logger.
- 4. Select Close to complete and exit the configuration page.

Installing the Wall Mount

Setup of your UTRED30-WiFi is complete.

Attach the Wall Mount Bracket on the side of your refrigerator or freezer, preferably at eye-level with the adhesive strip provided with the Wall Mount.

Before sticking on the Wall Mount, make sure the probe cable and the USB cable from the UTRED30-WiFi can both reach the device comfortably without obstruction or at risk of being accidentally disconnected if knocked.

Insert the UTRED30-WiFi into the Wall Mount, connect the USB and sensor cables. The display should show the word "**READY**" as seen in the image (right).

Note: Both the cloud and WiFi symbols are showing in the top left with a tick in each to confirm successful setup of the device.



Find Quality Products Online at: www

Starting your UTRED30-WiFi

Press and hold the **START/Clear/Stop** button.


STARTING will appear along with **READY**. Release the button once **READY** disappears.

The UTRED30-WiFi now records temperature data.

The Logger will **not** start if:

- You release the button before READY disappears.
- You keep holding the button for more than 2 seconds after READY disappears.
- The backup battery is critically low and the Logger is not connected to power.



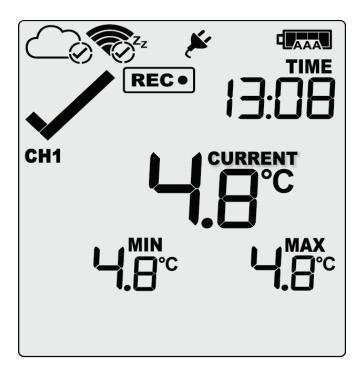


Find Quality Products Online at:

Viewing Second Temperature Channel

Press the **CHANNEL FUNCTION** button to change the channel on screen. In this example, the display switched from CH1 to CH2.

The device will toggle between the two channels if both external probes are configured.

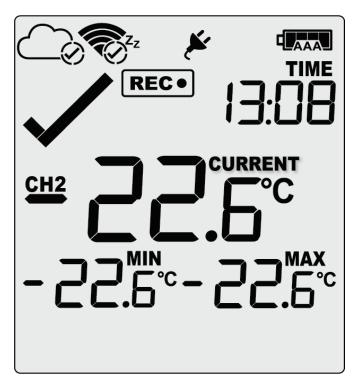

Note: The probe cover can be inserted in an unused channel port.

Page 18

Find Quality Products Online at:

www.GlobalTestSupply.com