

R5110

REED INSTRUMENTS

Non-Contact Voltage Detector



**Instruction
Manual**



Table of Contents

Introduction	3
Product Quality.....	3
Safety	3
Features.....	4
Included.....	4
Specifications	4
Instrument Description	5
Operating Instructions.....	5-6
<i>Turning the Detector ON/OFF</i>	<i>5</i>
<i>Turning the Flashlight ON/OFF</i>	<i>5</i>
<i>AC Voltage Detection</i>	<i>5</i>
<i>High/Low Voltage Detection Modes.....</i>	<i>6</i>
<i>Low Battery Indicator</i>	<i>6</i>
<i>Auto Power Off.....</i>	<i>6</i>
Battery Replacement.....	6
Product Care	7
Product Warranty	7
Product Disposal and Recycling	8
Product Support.....	8

Introduction

Thank you for purchasing your REED R5110 Non-Contact Voltage Detector. Please read the following instructions carefully before using your instrument. By following the steps outlined in this manual your detector will provide years of reliable service.

Product Quality

This product has been manufactured in an ISO9001 facility and has been calibrated during the manufacturing process to meet stated product specifications.

Safety

- Never attempt to repair or modify your instrument. Dismantling your product, other than for the purpose of replacing batteries, may cause damage that will not be covered under the manufacturer's warranty. Servicing should only be provided by an authorized service center.
- Do not use the product if it appears to be damaged or isn't operating properly.
- Do not apply more than the specified voltage.
- Before each use, verify operation by testing a known working circuit that is within the rating of this unit.
- Operation may be affected by differences in socket design and type.
- Low voltage mode (24V AC~1000V AC) is suitable for testing low-voltage motors (< 90V), audio systems, arc welding machines, underground mine lighting, cables with thick insulation, and other weak electromagnetic AC signals.
- High voltage mode (90V AC~1000V AC) is suitable for detecting urban electric supply and three-phase systems such as power distribution units, electrical panels and electrical appliances.

Features

- Suitable for receptacles or against insulated wire
- Double insulated housing for increased safety
- Audible (buzzer) and visual (LED) indicators
- Built-in flashlight
- Pocket clip
- Auto shut off
- Cat. IV 1000V safety rating


Included

- Batteries

Specifications

Voltage Range:	Low Voltage Mode: 24 to 1000VAC High Voltage Mode: 90 to 1000VAC
Frequency Range:	50 to 60Hz
Built-in Flashlight:	Yes
Pocket Clip:	Yes
Alarm:	Yes (audio/visual)
Auto Shut-off:	Yes (after 5 minutes)
Low Battery Indicator:	Yes
Power Supply:	2 x AAA batteries
Overvoltage Category:	CAT. IV 1000V
Product Certifications:	CE, ETL
Operating Temperature:	32 to 104°F (0 to 40°C)
Storage Temperature:	-4 to 122°F (-20 to 50°C)
Operating Humidity Range:	0 to 80%
Max. Operating Altitude:	6561' (2000m)
Dimensions:	5.9 x 0.9 x 0.7" (150 x 23 x 18mm)
Weight:	1.8oz (50g)

Instrument Description

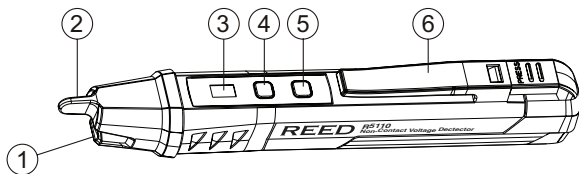

- | | |
|--------------------------------|----------------------|
| 1. Flashlight | 4. Power Button |
| 2. NCV Sensor Head | 5. Flashlight Button |
| 3. Mode Status Indicator Light | 6. Pocket Clip |

Operating Instructions

Turning the Detector ON/OFF

Press the power button to turn the detector on. The buzzer will beep twice and the red indicator light will illuminate indicating that the detector is on and ready for use. The default voltage detection range is set to High (90 to 1000VAC). Press and hold the power button again to turn the detector off.

Turning the Flashlight ON/OFF

Press the Flashlight button to turn the built-in flashlight ON and OFF. Please note the detector does not need to be powered on for the flashlight to function. The flashlight will automatically turn off when the detector is not used for 5 minutes.

AC Voltage Detection

Place the NCV sensor head near the test object or the power socket with AC voltage. When AC voltage is detected, the red LED in the tip and audible alarm will turn on.

continued...

High/Low Voltage Detection Modes

1. When the detector is powered on the red indicator light on the panel will light up indicating the default voltage detection range is set to High (90 to 1000VAC).
2. Press the power button once and the red indicator light will switch to green indicating the detector is now in Low Voltage Mode (24 to 1000VAC). In low voltage mode, the detector is more sensitive to electrical interference/noise. Please only use low voltage mode during weak electrical field environment.

Low Battery Indicator



When the battery voltage is lower than 2.4V, the detector will automatically turn OFF.

Auto Power Off

The detector will auto power off when it is not used for 5 minutes.

Battery Replacement

1. Hold the detector with one hand, use your thumb of the other hand to press down on the battery compartment latch, and pull the end of the detector.
2. Pull out the end of the detector along the direction shown and replace the batteries.

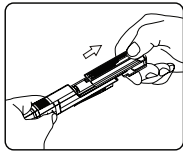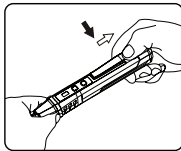

Product Care

To keep your instrument in good working order we recommend the following:

- Store your product in a clean, dry place.
- Change the battery as needed.
- If your instrument isn't being used for a period of one month or longer please remove the battery.
- Clean your product and accessories with biodegradable cleaner. Do not spray the cleaner directly on the instrument. Use on external parts only.

Product Warranty

REED Instruments guarantees this instrument to be free of defects in material or workmanship for a period of one (1) year from date of shipment. During the warranty period, REED Instruments will repair or replace, at no charge, products or parts of a product that proves to be defective because of improper material or workmanship, under normal use and maintenance. REED Instruments total liability is limited to repair or replacement of the product. REED Instruments shall not be liable for damages to goods, property, or persons due to improper use or through attempts to utilize the instrument under conditions which exceed the designed capabilities. In order to begin the warranty service process, please contact us by phone at 1-877-849-2127 or by email at info@REEDInstruments.com to discuss the claim and determine the appropriate steps to process the warranty.

Product Disposal and Recycling



Please follow local laws and regulations when disposing or recycling your instrument. Your product contains electronic components and must be disposed of separately from standard waste products.

Product Support

If you have any questions on your product, please contact your authorized REED distributor or REED Instruments Customer Service by phone at 1-877-849-2127 or by email at info@REEDInstruments.com.

Please visit www.REEDInstruments.com for the most up-to-date manuals, datasheets, product guides and software.

*Product specifications subject to change without notice.
All rights reserved. Any unauthorized copying or reproduction of this manual is strictly prohibited without prior written permission from REED Instruments.*

REED

INSTRUMENTS

TEST & MEASURE WITH CONFIDENCE



CHECK OUT OUR LATEST PRODUCTS!

REED INSTRUMENTS

TEMPERATURE
& HUMIDITY



SOUND



MOISTURE



AIR VELOCITY



ELECTRICAL

